

**STOP**

- Confirm capacity ratings of all equipment prior to use.
- Review all safety signage on equipment prior to use.
- Examine equipment for damage to ensure that they are in proper operating condition. Do not use if product is damaged.
- All Jacks and Stands must be used on hard, level and even surfaces.

**STOP**Pipe &  
Industrial  
Tools**BEAM CLAMP  
2110**

Pipe Capacity  
**2" - 24"**  
Weight Capacity  
**2,500 lbs.**

Safety Leash MUST  
be used with all Beam  
Clamp rollers.



Team Lift

**SAFETY SPECIFICATIONS**

- Always secure safety sling around I-Beam when using Beam Clamp Rigging Rollers.
- Do not shock load. Load must be lowered onto Beam Clamp Rigging Rollers.
- Do not place hand between pipe and loading surface of the Rigging Rollers.
- Review product specification sheets of Rigging and Transportation product line for product weight – Most products in this category are two man lift or machine lift only.
- Remove all damaged equipment and tag them "Do Not Use".