

## CM Beam Clamp User Instructions

### **SCREWLOK BEAM CLAMPS**

- The tips of the side plates should touch the beam flange. The load is transmitted into the beam and away from the edge
- Used for attaching hoists to I-beams.
- **DO NOT USE AS A LIFTING DEVICE TO LIFT I-BEAMS**

