


Riley Superclamp – Safe Use of USC Universal Beam Clamp



IMPORTANT PLEASE READ CAREFULLY

UNIVERSAL 'SUPERCLAMP' For side load applications

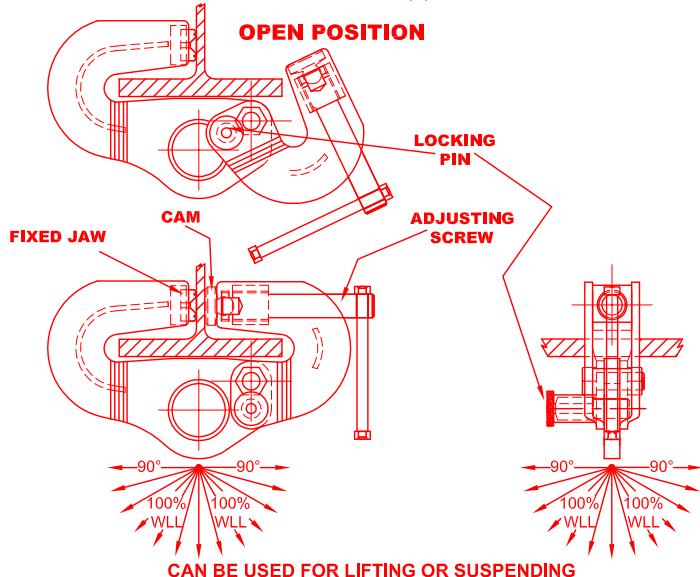


THE CORRECT USE OF UNIVERSAL SUPERCLAMPS

1. Ensure the fixed jaw and cam is free from any defects.
2. Apply the clamp to the beam in the open position, close the clamp ensuring that the clamp is FULLY CLOSED.
3. Adjusting Screw must be FULLY HAND TIGHT before any load is applied, failure to do so could result in serious injury to persons or damage to equipment.
4. Universal Clamps must be thoroughly examined by a competent person at least every six months and an Examination Report completed, which must be available for inspection. All repairs to this equipment must be carried out by the supplier or original manufacturer.
5. This equipment must only be used by competent persons.

WARNING:

Do not exceed working load limits or use this equipment in the open position or use as a Plate Lifting Clamp.

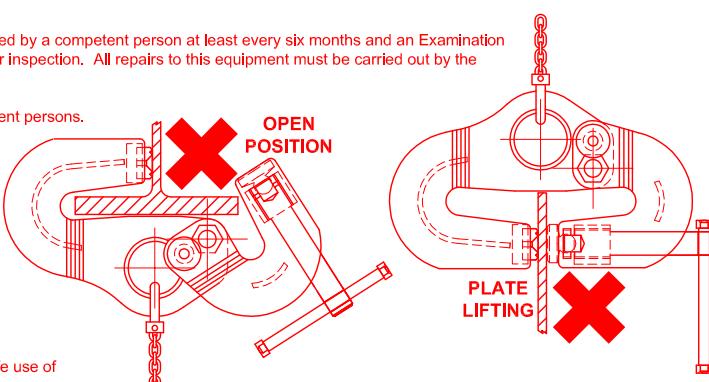

Guidelines for the inspection and safe use of 'SUPERCLAMP' Equipment.

Follow all requirements of law, rules and regulations applicable in your country pertaining to lifting operations, ensuring all maintenance, testing, inspection and operator training requirements are strictly adhered to. This is in your interest, and can prevent fatal accidents and industrial disaster.

RILEY (LIFTING EQUIPMENT) LTD

REGISTERED OFFICE: HOPE BUILDING, DOCKRAY STREET, COLNE, LANCASHIRE, BB8 9HT

TELEPHONE: (01282) 867177 (Six Lines) FAX: (01282) 863698

OVERSEAS TELEPHONE: +44 282 867177 OVERSEAS FAX: +44 282 863698

EMAIL: info@superclamp.co.uk WEB SITE: www.superclamp.co.uk